


TW4-LB Basement Wiring Diagram

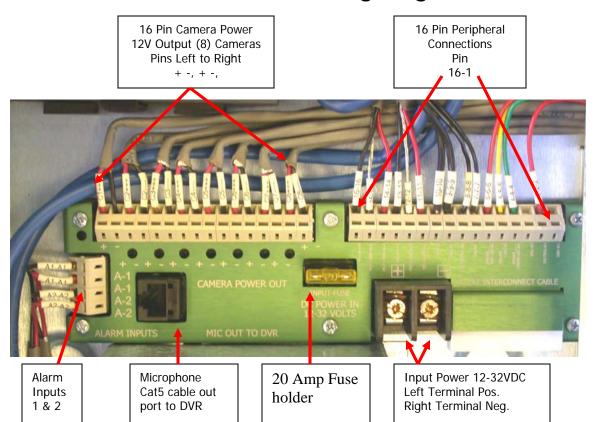


Wiring Installation Table

From left to right:

Cover Description	Pin #	Wiring Name	Function
Mic Out to DVR	N/A	Cat 5 Cable	Connects basement microphone input to DVR
Alarm Inputs			A7-A7 A-1 A-1 A-1 A-2 A-2 A-2 A-2 A-2
A-1	1	A1-A1 Blk	Event button input Normally Open
A-1	2	A1-A1 Red	Event button input Normally Open

A-2	3	A2-A2 Blk	Second event button input Normally Open
A-2	4	A2-A2 Red	Second event button input Normally Open

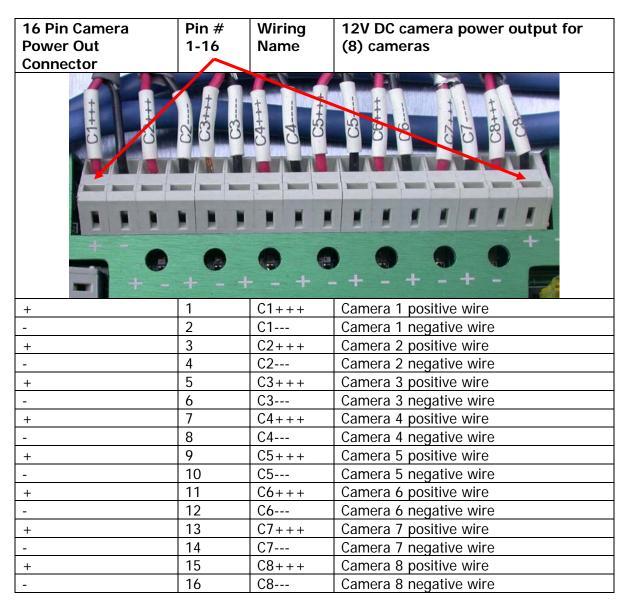

16 Pin Peripheral Connector Pin #'s **1**6-1 16 Pin Peripheral Pin# Wiring **Function Connections Label** Label Mic-1-In #16 16 16-16 Microphone one in (Black) Mic-1-Grn #15 15 15-15 Microphone one ground (Bare) Mic-1-Pwr #14 14 14-14 Microphone one power (Red) 13 Mic-2-In #13 13-13 Microphone two in (Black) Mic-2-Grn #12 12 12-12 Microphone two ground (Bare) Microphone two positive power (Red) Mic-2-Pwr #11 11 11-11 10 10-10 5VDC power to Wireless Bridge +5V #10 GRN 9 9-9 Ground wire for Wireless Bridge 8 8-8 +12V-Switch #8 12v power to Switch GRN #7 7 7-7 Ground wire for Switch 6 Driver Red LED-#6 6-6 Red LED wire LED input Driver 12V-#5 5 5-5 12v power for remote LED 4 Driver Green-#4 4-4 Green wire LED input 3 GRN-#3 Ground available 2 INI-Trigger 2-2 Ignition trigger source 12-28VDC GRN #1 1 Ground available Label Pin# **Function** 20 pin Connector cable connects 20 CRT Interconnect N/A 20 pin Cable cable basement peripheral's to DVR DC Power IN 12-32V Screw Main Power Positive input 12-32V DC Terminal DC Power IN Screw Main Power Negative input Terminal

Input-Fuse

N/A

N/A

20 Amp fuse holder

Peripheral Basement Connections

The TSS TW4 basement is used to mount the TW4-LB recorder and provide the location for wiring termination board, wireless bridge, 5-port switch, UPS battery.

